




XW4 Quickstart Guide

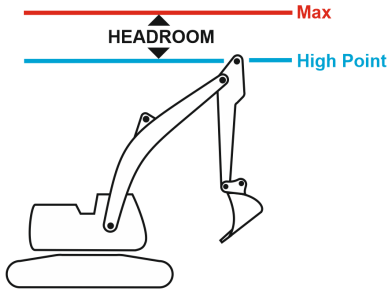

When either a height or slew limit is switched ON, the cab mounted purple beacon will flash.



In the event of a fault, the XW4 system will fail safe and all motion will be prevented. To remobilize the machine, use the **VERRIDE** key switch on the main controller unit.




- SLEW** Access the slew limiter page
- SET** Set a new height limit
- OFF** Switch height limiting OFF




Setting a new height limit

- HERE** Set the height limit at the current high point
- ▲▼** Manually enter a maximum height
- ok** Confirm the manually edited maximum height
- ESC** Abandon changes and return to height limiter page

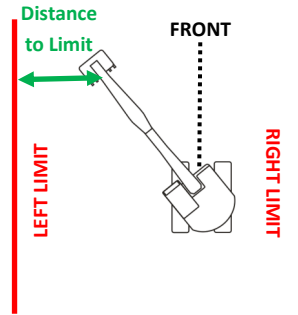

- HGT** Access the height limiter page
- SET** Set a new slew limit
- OFF** Switch slew limiting OFF

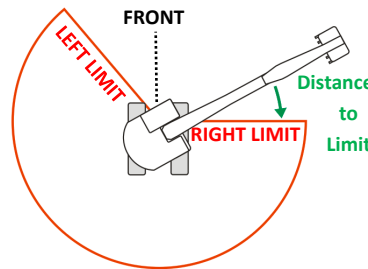


Note: If the machine has an offset boom with proximity switch detection, both slew left and right will be prevented if the boom is not central.



Setting a new lateral slew limit

- HERE** Set the slew limit at the current lateral distance
- SIDE** Select left/right side for adjustment
- ▲▼** Manually enter a lateral distance
- ok** Confirm the manually edited lateral distance
- ESC** Abandon changes and return to height limiter page

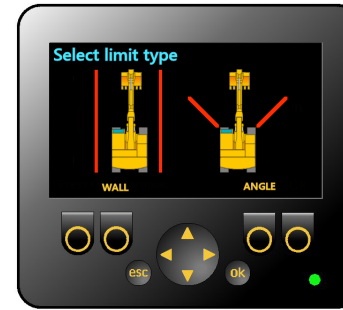

The slew limit type selection is available when the slew limit is first switch ON. The option will remain until the limit is switch OFF again.



- 1 SET** Set a new slew angle limit
- Done** Confirm setting and continue



Setting a new angular slew limit

