




XW5 RCI with Height and Slew Limitation

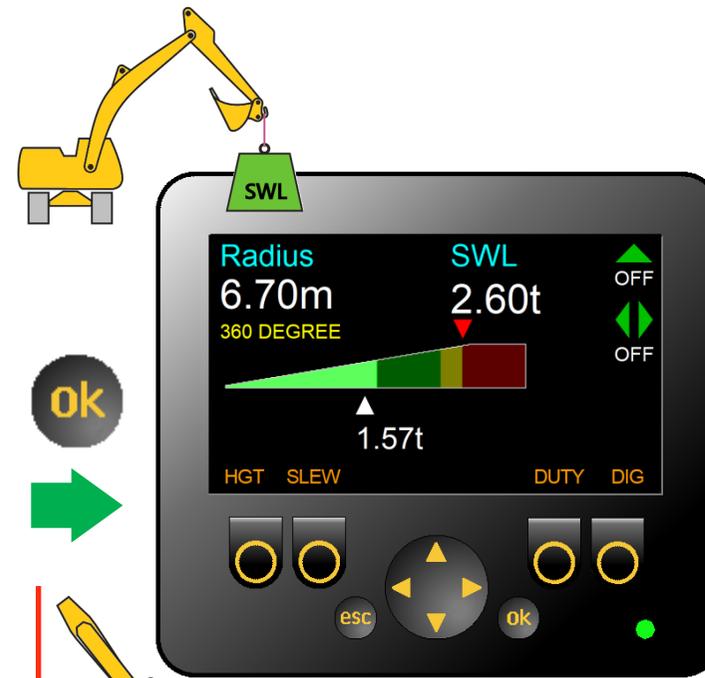

- RCI**
- DUTY** Select lifting duty.
- DIG** Disable RCI, go to digging mode.

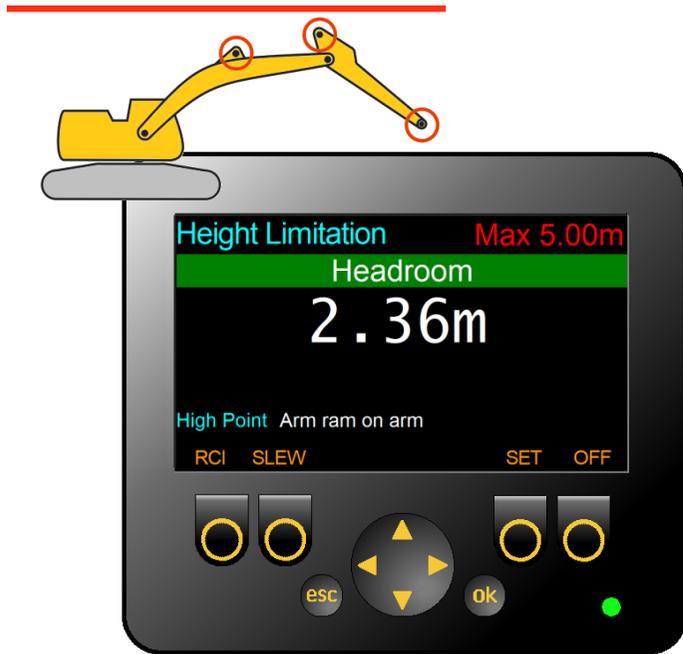

- HGT**
- SET** Set a new limit either manually or at the current height or slew position.
- OFF** Disable the height or slew limitation.

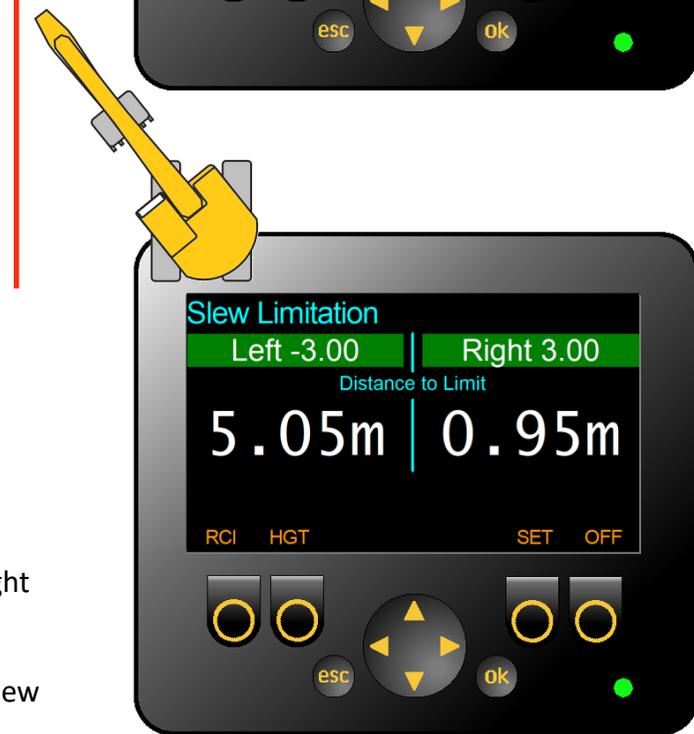

- SLEW**



Read the Operators Manual for more detail.

